


Super Files II

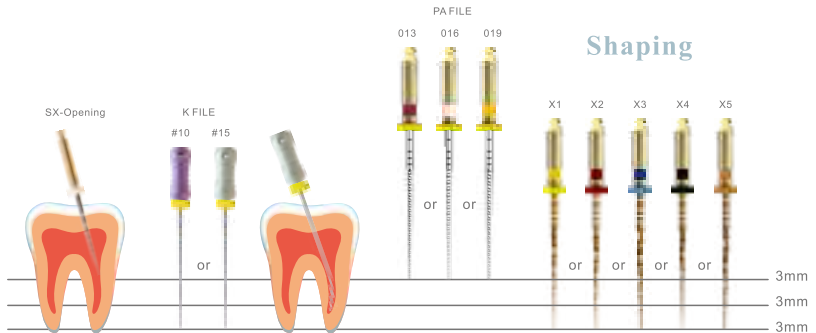

1. Establish Coronal Access and Straight-Line Pathway with SX
2. Verify Working Length (WL) and Ensure Apical Patency
3. Validate Consistent Glide Path Formation
4. Progressive Canal Preparation Using X1 through X5